



VF 27 _ ... VF 49 _ **VFR 44 _ , VFR 49 _**

| | | | | _HS | _S - _P (IEC) | | |
|----------|----|----|----|-----|---------------|--|-------|
| A | B3 | B7 | V5 | | | | ← VF |
| | B6 | B8 | V6 | | | | ← VFR |
| N | B3 | B7 | V5 | | | | ← VF |
| | B6 | B8 | V6 | | | | ← VFR |
| V | B3 | B7 | V5 | | | | ← VFR |
| | B6 | B8 | V6 | | | | ← VFR |
| P | B3 | B7 | V5 | | | | ← VF |
| | B6 | B8 | V6 | | | | ← VFR |
| F | B3 | B7 | V5 | | | | ← VF |
| | B6 | B8 | V6 | | | | ← VFR |
| U | B3 | B7 | V5 | | | | ← VF |
| | B6 | B8 | V6 | | | | ← VFR |

Base mounting position.

Gearboxes are plated only for base mounting position (B3). They can nevertheless also be installed in any of the derived positions (B6, B7, B8, V5, V6). Mounting position may not be changed after installation.