


# S ... P


## B3

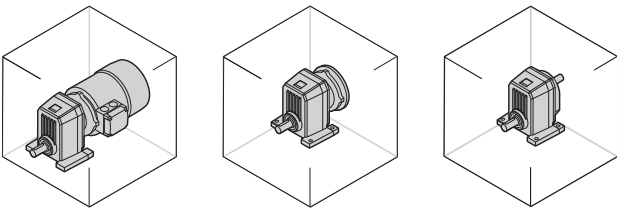


\_S

\_P(IEC)

\_HS

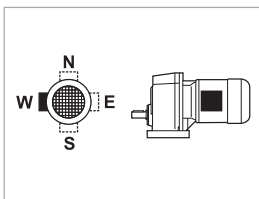


## B6

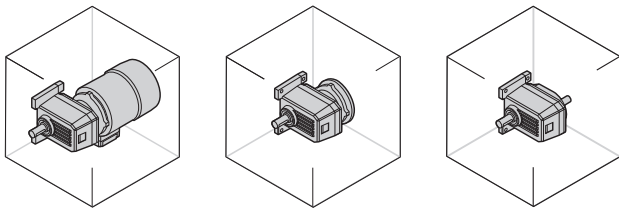


\_S

\_P(IEC)

\_HS

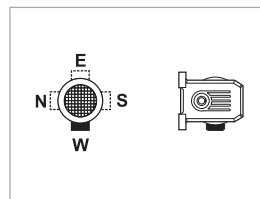


## B7

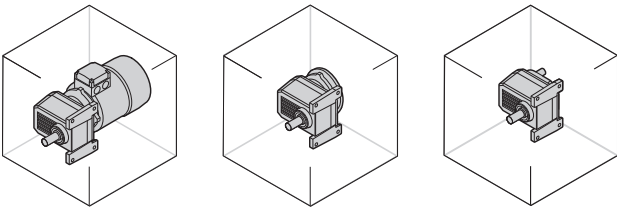


\_S

\_P(IEC)

\_HS

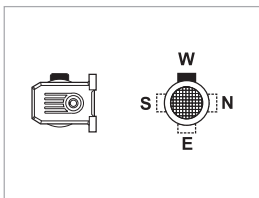


## B8

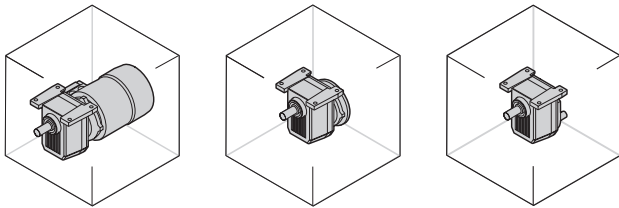


\_S

\_P(IEC)

\_HS

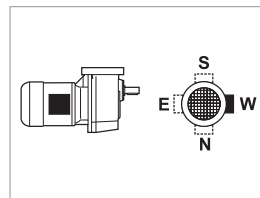


## VA

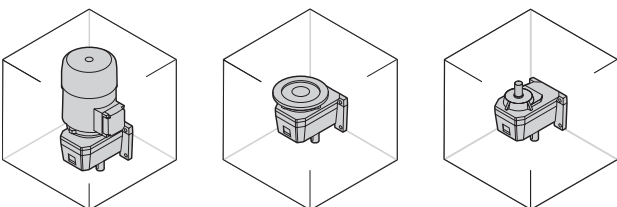


\_S

\_P(IEC)

\_HS

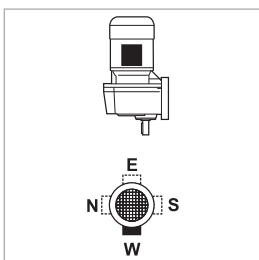


## VB

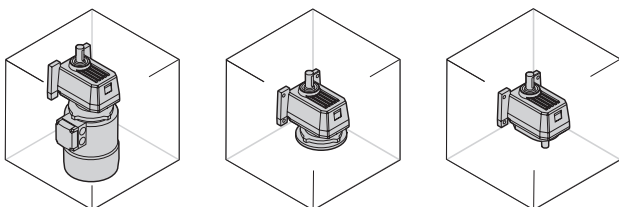


\_S

\_P(IEC)

\_HS

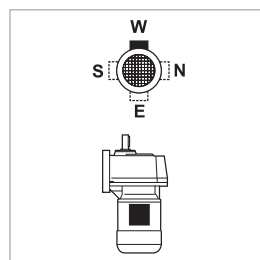


W = Default



# S ... F


## B5

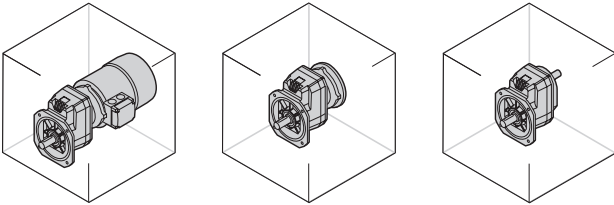


\_S

\_P(IEC)

\_HS

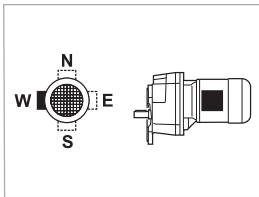


## B51

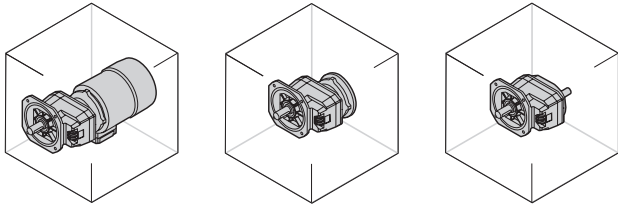


\_S

\_P(IEC)

\_HS

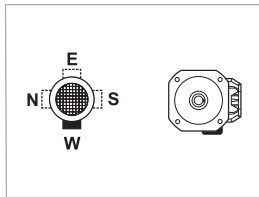


## B53

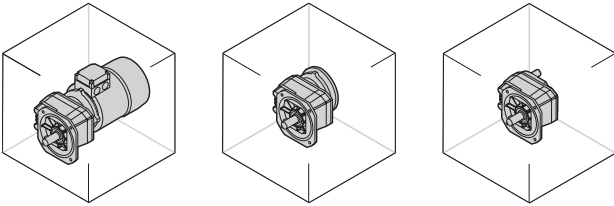


\_S

\_P(IEC)

\_HS

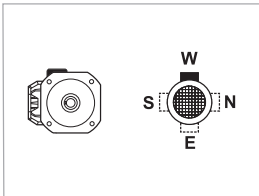


## B52

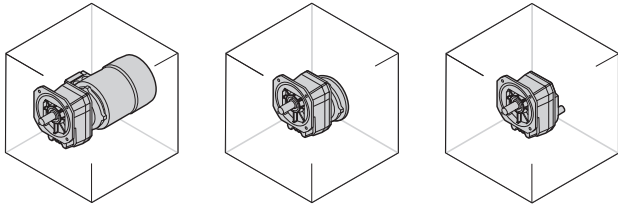


\_S

\_P(IEC)

\_HS

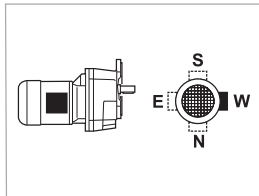


## V1

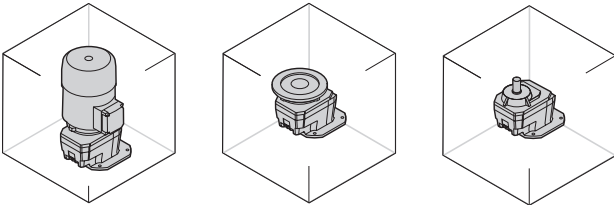


\_S

\_P(IEC)

\_HS

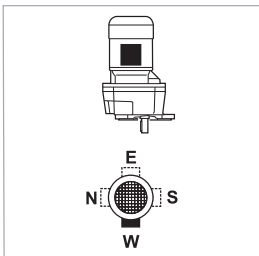


## V3

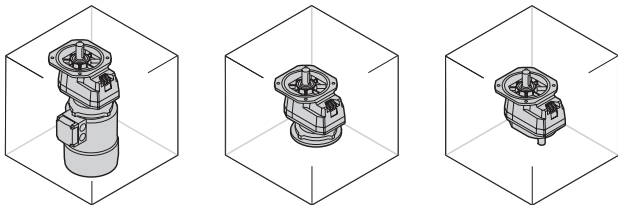

\_S

\_P(IEC)

\_HS

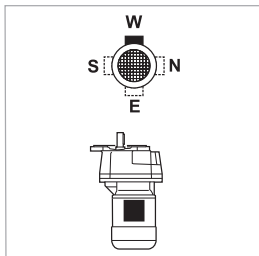

W = Default